Bora Laskin Roof Replacements

1		GENERAL
1.01	.01 .02	Related Work Section 01001 – General Requirements Section 01545 - Sealants
1.02	.01 .02 .03 .04	Protection Prevent damage to the existing structure and adjacent landscaping as existing roofing and materials are being removed. Prevent debris from blocking surface drainage inlets and mechanical electrical systems which must remain in operation. Do not interfere with use and activities of adjacent buildings. Maintain free and safe passage to and from buildings. Maintain integrity of existing fire exits. Fence drop area and sign indicating overhead work.
2		EXECUTION
2.01	.01	Preparation Inspect site and verify with Owner items designated for demolition and removal.
2.02	.01 .02 .03 .04 .05 .06	Demolition Demolish and remove existing roofing, and flashing, down to existing vapour barrier. Remove existing insulation, fiber board, cants and wood blocking, and miscellaneous materials. Remove demolished material from site. Demolish and remove material in a manner to minimize dust. Keep dusty materials wetted. At end of each days work, leave site in a safe, watertight condition. Selling or burning materials on site is not permitted. Materials and debris shall not be stacked in building to extent that overloading of any part of the structure will occur.
2.03	.01 .02	Restoration Upon completion leave site clean. Reinstate areas and existing works outside areas of demolition to conditions that existed prior to commencement of work.

END OF SECTION